ICEE® MAKER

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLING AND USING YOUR ICEE® MAKER. PARENTAL SUPERVISION RECOMMENDED.

Assembly Diagram

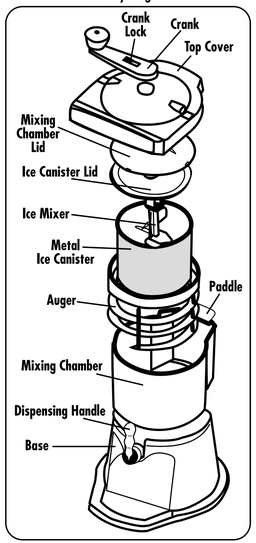

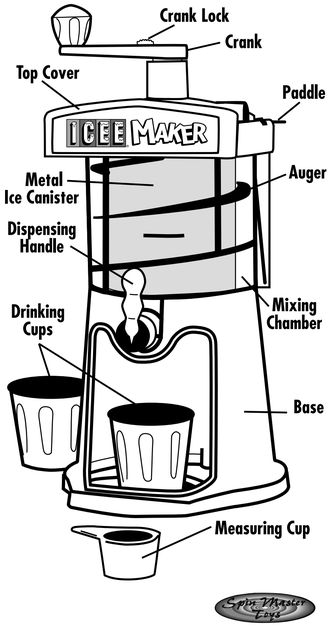

WHAT YOU WILL NEED FROM HOME:

- 1 teaspoon lukewarm water
- 1 spoon for removing any leftover Icee® from **Ice Canister**
- table salt (enough to fill the **Measuring Cup** provided)
- ice cubes (enough to fill the **Ice Canister**) *Note: Smaller cubes or crushed ice work best.*
- 1 can of soda pop or 355ml of fruit punch or juices high in sugar (ie: grape juice).

THESE DIRECTIONS WILL MAKE 1 CANISTER OF ICEE®, ENOUGH TO FILL THE 2 CUPS PROVIDED.

NOTE: THE ICEE® MAKER PERFORMS BETTER AND CREATES BETTER END RESULTS WHEN THE DRINK USED IS COLD AND CONTAINS SUGAR.
DRINKS WITH A LOW SUGAR CONTENT, DIET DRINKS AND DRINKING WATER DO NOT WORK.

CLEANING YOUR ICEE® MAKER:

BEFORE USE, THOROUGHLY WASH ALL PARTS THAT MAY CONTACT FOOD. CAREFULLY DISASSEMBLE AND WASH ALL PARTS BEFORE AND AFTER EACH USE.

1. Completely disassemble your Icee® Maker (Refer to **Assembly Diagram**)
2. To unlock and remove the **Mixing Chamber** from the **Base**, turn the **T-Lock** on the base a 1/4 turn, then pull the **Mixing Chamber** up from the **Base**. The **T-Lock** is located inside the **Base** behind the **Dispensing Handle**.
3. Wash completely with warm soapy water.
4. Rinse thoroughly with warm water.
5. Completely dry all parts with a soft cloth.
6. Reassemble all parts.

IT IS VERY IMPORTANT THAT YOU CLEAN YOUR ICEE MAKER AFTER USE. IF NOT, THE LIQUID WILL DRY AND CAUSE DAMAGE TO THE UNIT. WHEN YOU ARE CLEANING THE UNIT, MAKE SURE TO OPEN AND CLOSE THE DISPENSING HANDLE WITH THE MIXING CHAMBER FILLED WITH WARM WATER UNTIL IT'S ALL FLUSHED OUT. THIS WILL ENSURE THAT THE DISPENSING HOLE IS THOROUGHLY CLEAN.

View from Underneath the Base

TURN THE T-LOCK A 1/4 TURN TO UNLOCK THE MIXING CHAMBER

PULL THE MIXING CHAMBER UP FROM THE BASE

NOTE: DO NOT PLACE THE ICEE® MAKER IN A DISHWASHER - IT IS NOT DISHWASHER SAFE. UNIT IS NOT MICROWAVE SAFE.

ICEE® TIME IS ANYTIME!

Now that all the parts are clean, it's time to make an Icee®!

1. Reattach the **Mixing Chamber** to the **Base**. Don't forget to turn the **T-lock** a 1/4 turn to secure it.
2. Turn the **Dispensing Handle** to the closed position to avoid spills. (Refer to Diagram **A**)
   WARNING: DO NOT PLACE FINGERS INSIDE OF DISPENSING HOLE.
3. Place **Auger** in **Mixing Chamber**.

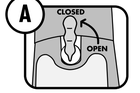

4. Place the **Paddle** inside the **Mixing Chamber**, making sure the 2 knobs lock into the slots located on the **Mixing Chamber.** (Refer to Diagram **B**)
5. Pour a cold drink into the **Mixing Chamber**.
   For best results, do not fill past the Fill Line.
   NOTE: THE ICEE® MAKER PERFORMS BETTER AND CREATES BETTER END RESULTS WHEN THE DRINK USED IS COLD AND CONTAINS SUGAR. DRINKS WITH A LOW SUGAR CONTENT, DIET DRINKS AND DRINKING WATER DO NOT WORK.

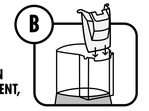

6. Place the **Ice Mixer** securely on the button inside of the **Ice Canister**. (Refer to Diagram **C**)

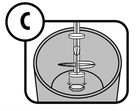

7. Pour ice into the **Ice Canister**. (Refer to Diagram **D**) *Note: smaller ice cubes or crushed ice work best.*
   Make sure to pour ice evenly around the **Ice Mixer**. Completely fill the **Ice Canister**.
   Make sure to leave just enough room for the **Ice Canister Lid** to fit back on.
   HOLD ON TO THE **ICE MIXER** TO ENSURE THAT IT STAYS FIRMLY ON THE BUTTON.
8. Completely fill the **Measuring Cup** with regular table salt. Pour the salt mixture evenly over the Ice Cubes.
9. Pour 1 tablespoon of lukewarm water over top of the ice and salt mixture.
   CAUTION: THE ICE CANISTER AND THE ICE AND SALT MIXTURE INSIDE OF THE ICE CANISTER DROP TO BELOW FREEZING TEMPERATURES. AVOID CONTACT WITH BOTH OF THESE UNITS.
10. Place the **Ice Canister Lid** securely on the **Ice Canister**. Using a towel or oven mitts to protect your hands, pick up the Ice Canister while securing the top with your thumbs. Shake the Ice Canister firmly for 5 seconds.
11. Place the **Ice Canister** inside the **Auger**. (The **Auger** should already be in the **Mixing Chamber**).

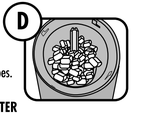

12. Place the **Mixing Chamber Lid** securely on the unit and turn clockwise to lock. (Refer to Diagram **E**)

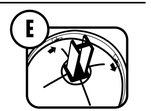

13. Place **Top Cover** securely on the unit. (Refer to Diagram **F**)

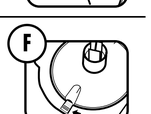

14. Attach **Crank** and switch **Crank Lock** to secure. (Refer to Diagram **G**)
15. Start cranking in a clock wise direction. For best results turn **Crank** continuously for 4 minutes.
    If the beverage that you are using is not already prechilled it will take 4 1/2 to 6 minutes to achieve desired results.
    NOTE: YOU MAY FIND THE CRANK HARD TO TURN AT THE VERY BEGINNING. TRY TURNING THE CRANK A LITTLE IN BOTH DIRECTIONS IN ORDER TO GET THE ICE MOVING. ALSO, THE CRANK MAY BE HARD TO TURN AS YOUR ICEE® NEARS COMPLETION; THIS IS NORMAL.

16. Every 30 seconds, press down quickly on the **Paddle** 3 or 4 times. This will help the Icee® to flow better in the unit. (Refer to Diagram **H**)

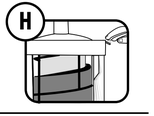

17. Once the liquid has turned into an Icee®, place a cup under the **Dispensing Handle**, and turn the **Dispensing Handle** to the open position. (Refer to Diagram **I**)
    Crank in a counter-clockwise direction. It will take a few turns to push the Icee® down into the dispensing hole. Push the **Paddle** at the back to push all of the Icee® out of the back of the unit.
18. Any left over Icee® can be removed by using a spoon.
19. Enjoy!

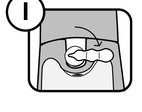

PROBLEM	SOLUTION
Ice Mixer does not turn properly.	The **Ice Mixer** has come off the button. Using a towel or oven mitts to protect your hands, remove the **Metal Ice Canister**, open the **Ice Canister Lid** and gently rotate the **Ice Mixer** by hand to move the ice out of the way. Make sure the **Ice Mixer** is placed back on the button. Replace the **Ice Canister Lid** and place the **Metal Ice Canister** back in the **Mixing Chamber.**
Ice Canister Lid does not seal properly.	Remove just enough ice from the **Metal Ice Canister** to close the lid. It may be filled too high.
Consistency of Icee® is very liquidy.	• Make sure that proper amounts of luke warm water, salt, and ice were put inside of the **Ice Canister**. • Make sure that you use a cold drink from the refrigerator for best results. • Diet drinks or drinks with low sugar content will not freeze to a satisfactory level. Please use regular soda pop or a non-diet fruit punch. • Make sure to turn the **Crank** for 4 minutes before trying to dispense.
Ice Canister and **Auger** freeze together.	Have a parent remove the **Ice Canister** and **Auger** by holding the unit with a towel. Wash under warm water until Ice crystals disappear. Repeat Icee® Making Process using a drink with a higher sugar content or reduce the amount of salt to 1/2 of the measuring cup.
Difficulty turning the **Crank**.	Try rotating the **Crank** from a clockwise direction to a counter clockwise direction and back to a clockwise direction. This will reduce any blockage that may occur. Once the liquid becomes frozen the friction will automatically increase.

OPEN MIX DISPENSE

THE END RESULTS FROM THIS TOY ARE NOT AN EXACT REPRESENTATION OF A REAL ICEE®

ICEE® MAKER COMPLIES WITH FDA EXTRACTION TESTS (21 CFR 177.1520, 21 CFR 177.1500, 21 CFR 177.1580, 21 CFR 177.2600 & 21 CFR 180.22)

®ICEE IS A FEDERALLY REGISTERED TRADEMARK
© 2002 SPIN MASTER TOYS. All Rights Reserved. Item#70501

Conforms to safety standards ASTM F963-96a, EN71.
Products and colors may vary. MADE IN CHINA.
DOES NOT WORK WITH DIET BEVERAGES.

SPIN MASTER TOYS™
450 Front Street West, Toronto, ON M5V 1B6 Canada
Ph.: 1-800-622-8339 Fax: 416-364-8005
Web: www.spinmaster.com Email: toys@spinmaster.com